


INSTALLATION APPLICATION

- FAST AND EASY TO INSTALL
- PROVIDES RADIANT PROTECTION AGAINST SUMMER HEAT GAIN AND WINTER HEAT LOSS
- RESISTANT TO MOISTURE, MOLD AND FUNGI

### INSTALLATION METHOD

1. Unroll rFOIL™ Insulation horizontally against your wall with the FOIL side facing OUT.
2. Staple your rFOIL™ Insulation securely to your wall.
3. Repeat steps 1-2 to cover your entire wall, leaving a 1" horizontal gap between each application of rFOIL™.
4. Do not tape over the 1" gaps.
5. Install furring strips vertically along the walls on top of the rFOIL™ insulation
6. Install new siding on to the furring strips (as per manufacturers' specifications).

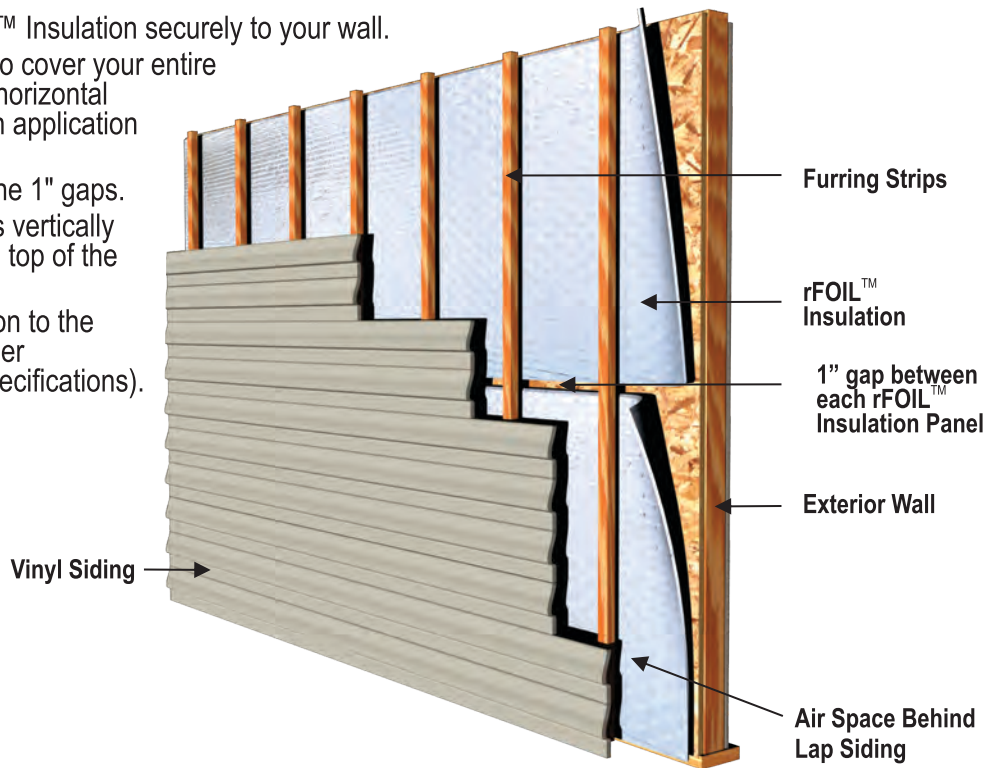

### SUGGESTED PRODUCTS FOR THIS APPLICATION:

rFLEX™ INSULATION PRODUCT	2520, 3800 or 4800 Series
rFOIL™ TAPE	15013 or 15012 (Reflective)

- a) Check local building codes for compliance before installation. This installation sheet is intended solely to illustrate the proper location and placement of rFOIL™ Reflective Insulation products in specific constructions applications. They are not intended to illustrate proper construction methods (which is ultimately the responsibility of the builder or contractor). The installation instructions are only recommendations relating to the location and placement of rFOIL™ Reflective Insulation products and rFOIL™ makes no claims that these construction systems are universally accurate.
- b) All warranties are void if rFOIL™ Reflective Insulation products are used in exterior applications, or in non-enclosed systems or buildings.
- c) Exercise caution when using rFOIL™ Reflective Insulation products near and around electrical wiring and devices.



279 Humberline Drive Etobicoke, ON M9W 5T6  
 Call Toll Free: 1-800-837-8961 Local: 416-798-1340  
 Fax: 416-798-1342 Email: sales@rfoil.com  
**Visit our Website: [www.rfoil.com](http://www.rfoil.com)**

