


INSTALLATION APPLICATION

- HELPS TO REDUCE BASEMENT DAMPNESS, AND INCREASES COMFORT
- REDUCES HEAT LOSS TO THE SURROUNDING ENVIRONMENT
- EXCELLENT VAPOR AND RADON BARRIER
- UNAFFECTED BY MOISTURE AND HUMIDITY
- QUICK AND EASY TO INSTALL - ADDS R-VALUE

**INSTALLATION METHOD**

1. Fasten 1" - 2" thick furring strips to wall with shot fasteners or lag bolts.
2. Unroll rFOIL™ insulation parallel and staple to the furring strips.
3. Seal seams with rFOIL™ reflective tape.
4. Fasten an additional set of furring strips overtop of the insulation material.
5. Attach drywall as per the usual method.

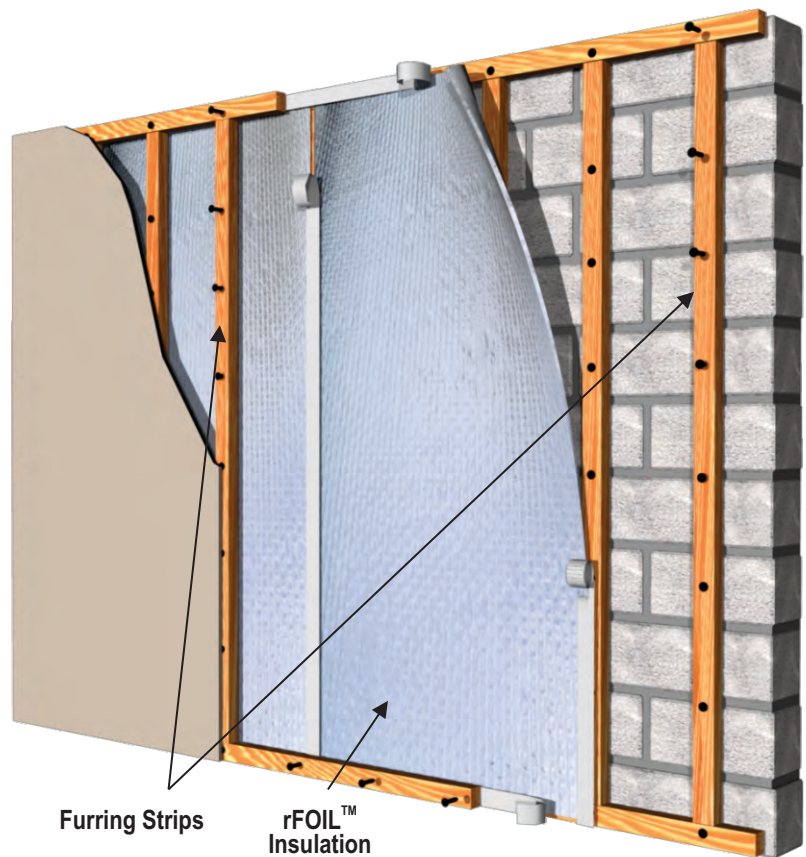

**SUGGESTED PRODUCTS FOR THIS APPLICATION:**

rFOIL™ INSULATION PRODUCT	2200 Series (Available in Various Dimensions)
rFOIL™ TAPE	15013 or 15012 (Reflective)

- a) Check local building codes for compliance before installation. This installation sheet is intended solely to illustrate the proper location and placement of rFOIL™ Reflective Insulation products in specific constructions applications. They are not intended to illustrate proper construction methods (which is ultimately the responsibility of the builder or contractor). The installation instructions are only recommendations relating to the location and placement of rFOIL™ Reflective Insulation products and rFOIL™ makes no claims that these construction systems are universally accurate.
- b) All warranties are void if rFOIL™ Reflective Insulation products are used in exterior applications, or in non-enclosed systems or buildings.
- c) Exercise caution when using rFOIL™ Reflective Insulation products near and around electrical wiring and devices.



279 Humberline Drive Etobicoke, ON M9W 5T6  
 Call Toll Free: 1-800-837-8961 Local: 416-798-1340  
 Fax: 416-798-1342 Email: sales@rfoil.com  
**Visit our Website: [www.rfoil.com](http://www.rfoil.com)**

