


- FAST AND EASY TO INSTALL
- PROVIDES RADIANT PROTECTION AGAINST SUMMER HEAT GAIN AND WINTER HEAT LOSS
- RESISTANT TO MOISTURE, MOLD AND FUNGI

INSTALLATION METHOD

- 1) Unroll rFOIL® Insulation horizontally against your wall with the WHITE-POLY side facing IN and the FOIL side facing OUT.
- 2) Staple your rFOIL® Insulation securely to your wall.
- 3) Repeat steps 1-2 to cover your entire wall, leaving a 1" horizontal gap between each application of rFOIL®.
- 4) Do not tape over the 1" gaps.
- 5) Install new siding over your rFOIL® insulation as per manufacturers' specs.

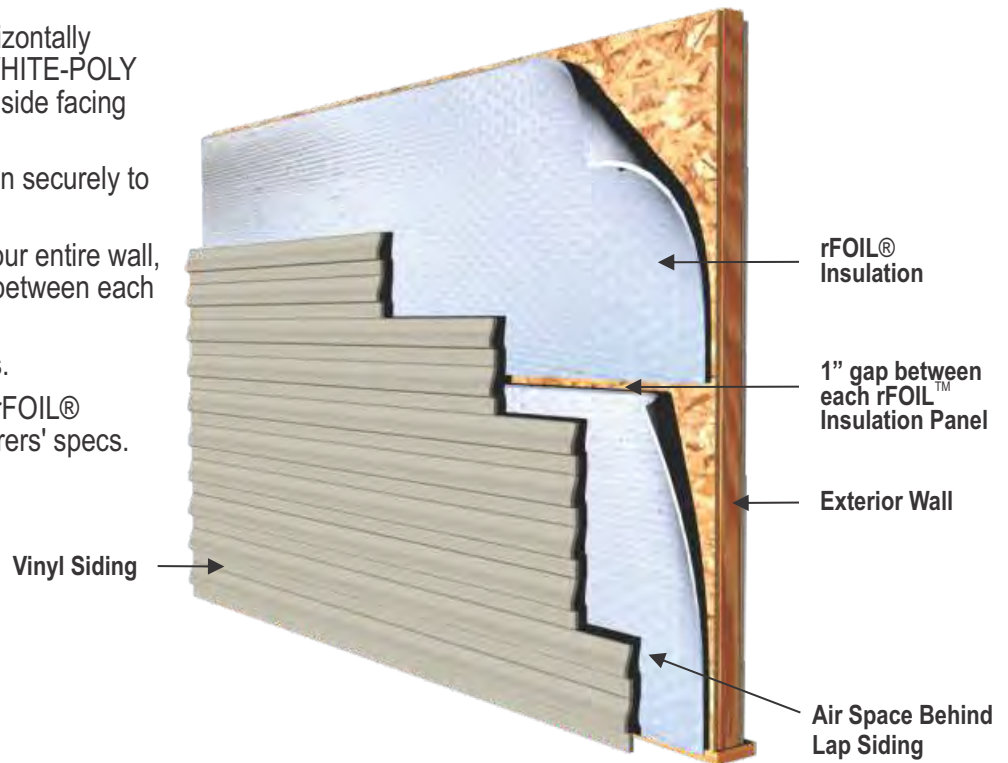

SUGGESTED PRODUCTS FOR THIS APPLICATION

rFOIL® INSULATION PRODUCT	2200 or 2500 Series (Available in Various Dimensions)
rFOIL® TAPES	15072 or 15073 (Metalized)

- a) Check local building codes for compliance before installation. This installation sheet is intended solely to illustrate the proper location and placement of rFOIL® Reflective Insulation products in specific constructions applications. They are not intended to illustrate proper construction methods (which is ultimately the responsibility of the builder or contractor). The installation instructions are only recommendations relating to the location and placement of rFOIL® Reflective Insulation products and rFOIL® makes no claims that these construction systems are universally accurate.
- b) All warranties are void if rFOIL® Reflective Insulation products are used in exterior applications, or in non-enclosed systems or buildings.
- c) Exercise caution when using rFOIL® Reflective Insulation products near and around electrical wiring and devices.

